

# **RXA-52**

## **MULTI-FREQUENCY, MULTI-CONSTELLATION, GNSS ANTENNA**

Thank you for choosing TeeJet Technologies' RXA-52 as your GNSS antenna solution. This document provides instructions for mounting and operation of the RXA-52. Contact a local dealer for more information or visit www.teejet.com.

The RXA-52 is an active antenna designed to receive signals from GPS, GLONASS, BeiDou and Galileo satellites as well as L-Band signals.

The RXA-52 antenna is designed to operate in GPS L1/L2, GLONASS L1/L2 and L-Band frequencies. The RXA-52 also supports the Galileo E1 and E5b frequencies as well as BeiDou B1 and B2 frequencies.

It can be used with any console with an internal GNSS receiver or any device with an antenna input port that both receives the RF signal and provides 3.3 - 18.0 VDC to the antenna.



#### **RXA-52 Kit Includes**

- RXA-52 Antenna
- Coaxial Cable, SMA male to TNC male, 20'/6 m (part number 45-05619) or 30'/9 m (part number 45-05620)
- Mounting Plate (part number 65-05243)

#### **INSTALLATION**

#### **Site Selection Guidelines**

Before installing the antenna, select a site that as closely as possible meets the following conditions for optimal performance:

- · An unobstructed line-of-sight from horizon to horizon and at all bearings and elevation angles
- As far as possible from reflective objects, especially those that are above the antenna and any water bodies, which can be a strong source of multipath reflections
- If obstructions and reflective surfaces are within 100 feet / 30 meters, ensure the site is as high as possible. Otherwise, mount the antenna as close as possible to a reference ground plane, i.e., rooftop, earth, etc., if one exists.
- When mounting the RXA-52 Antenna, a space of at least 5.9 inch / 15 cm between the antenna and any bend in the cable is required. Any length shorter than 5.9 inch / 15 cm puts undue stress on the cable and the enclosure for the RXA-52.
- The antenna should not be mounted where water can pool around it. The antenna housing is designed to withstand rain and splashing, but not submersion in liquids for sustained periods of time.
- Mount the antenna above all other metal objects to avoid multipath. Satellite signals received by the GNSS antenna by a reflection
  from an object can decrease positioning accuracy. For example, roof racks, large headlight enclosures, etc., can cause multipath that
  may result in a jump in GNSS position.

Warning! To avoid potential adverse effects, do not locate antennas near any high sources of heat.

#### **Installing the Antenna**

After a site has been selected, install the antenna as follows:

- 1. Mount the antenna on a secure, stable structure using the provided magnetic mounts. A surface mounting plate (Part Number 65-05243) is also available for mounting on non-magnetic surfaces. See Mounting Plate Instructions for details.
- 2. Attach the TNC connector of the coaxial cable to the antenna's TNC connector. Attach the other end of the coaxial cable to the antenna input port of the receiving device, which must provide power as detailed in the "Specifications" section of this guide. All TeeJet Technologies GNSS receivers provide the necessary power through their antenna RF connectors.


#### Figure 1: Orientation Example

Orient antenna towards the front of the vehicle.

Route cable toward the back of vehicle.



Figure 2: RXA-52 Dimensions in Millimeters

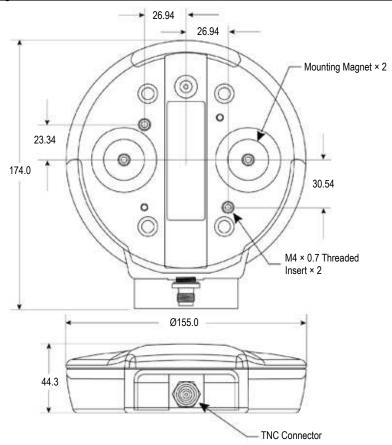

#### **Mounting Instructions**

The RXA-52 is equipped with two (2) built-in magnets for attaching to the included mounting bracket. If a permanent mount for the RXA-52 is required, please contact TeeJet Technologies Technical Support for more information.

#### **Intermediate Mounting Plate Template**


A template for the intermediate mounting plate has been provided below.

- · Red circles indicate holes where attachment will occur.
- Green lines indicate the outline of the mount and other holes for attaching the release plate.

WARNING! The optimal screw penetration into the mounting holes is 0.25 inch / 6 mm (±1/32 inch / 1 mm) deep. When selecting screws for mounting, ensure the screw penetration does not exceed this specification. Using excessively long screws can damage the antenna enclosure.

#### **Antenna Care**

- The RXA-52 is designed to withstand the elements, including rain, snow, and dust.
- However, to ensure your antenna performs optimally, keep the radome (the top surface of the antenna) clean and brush off any ice and snow.

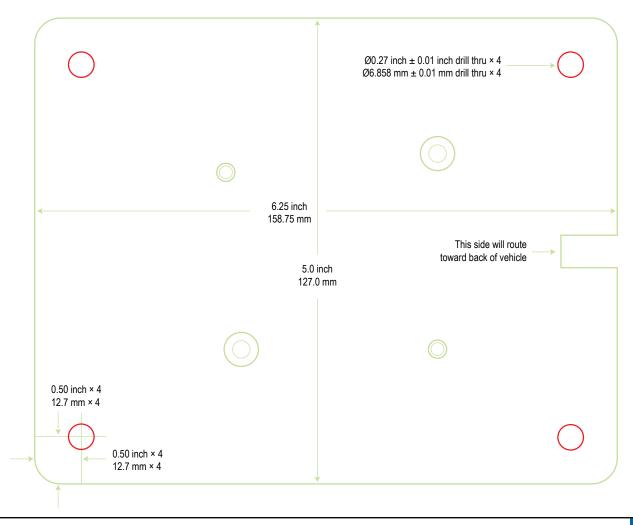

#### **SPECIFICATIONS**

# Performance Signal Received

GPS	L1, L2 E1, E5b
Pass Band (typical) Upper passband Lower passband L-Band	1220.0 ± 31.0 MHz
Out-of-Band Rejection  Band edges ± 50 MHz  Band edges ± 100 MHz	( ) ,
LNA Gain (typical) L1L2	
Gain at Zenith (90°) L1/B1/E1/G1 L2/B2/E5b/G2 L-Band	+4.0 dBic minimum
Gain Roll-Off (from Zenith to Horizon) L1/B1/E1/G1 L2/B2/E5b/G2	12 dB
L-Band	
Phase Center Stability	
	<5.0 mm
Polarization	
Phase Center Stability  Polarization  Noise Figure  VSWR	Right-hand circular
Phase Center Stability  Polarization  Noise Figure	Right-hand circular2.5 dB (typical)
Phase Center Stability  Polarization  Noise Figure  VSWR  L1-L2 Differential Propagation Delay	
Phase Center Stability  Polarization  Noise Figure  VSWR  L1-L2 Differential Propagation Delay  Group Delay Ripple	

## **Physical and Electrical**

Dimensions
6.1 in W × 1.77 in H × 6.85 in L 155 mm W × 45 mm H ×174 mm L
<b>Weight</b>
Mounting
2 × magnetic mounts 2 × M4 screw inserts
Power
Input voltage
Environmental
Temperature
Operating40°F to +185°F / -40°C to +85°C Storage67°F to +185°F / -55°C to +85°C
Humidity
<b>Salt Fog</b> MIL-STD-810G (CH1), 509.6
Water/Dust Resistance
IP67, IP69K
Vibration (operating)
Random MIL-STD-810G (CH1), 514.7 (15 g) Annex E
Shock

.....IEC 60068-2-27 Ea (25 g)

RoHS ..... EU Directive 2011/65/EU

#### Warranty

Compliance

Bump

1 year from Date of Purchase





